

FIND AND WATCH RECORDED SHOWS

You can use your DVR to playback a recorded program on any television with a set top box.

1. Press RECORDED TV/DVR.
3. Highlight a recorded program.
4. Press OK to see a Program Info screen.
5. Select PLAY.
6. Press STOP to select viewing options.

REWIND TV

You can rewind up to 3 hours on channels marked with a backward arrow in the Channel Guide.

1. Press REWIND. You will see the start and end times of the program and how far back you can rewind.
2. Press REWIND up to three times to rewind faster.
3. Press PLAY when you want to resume watching program.

SPECIAL EVENTS PAY-PER-VIEW

1. Tune to PPV Channel 800 and press OK.
2. Scroll to:
 - Don't Rent
 - Rent for \$
 - Program Info
3. If you choose Rent for \$, the amount shown on the screen will be added to your bill.
With DVR you can record, pause, and rewind as needed.

Please call to have this added to your TV service. All purchases are final once selected and cannot be canceled.

PARENTAL CONTROLS

Parental controls must be set on each set top box.

1. Press MENU.
2. Scroll to SETTINGS.
3. Choose Parental Controls/Parental Locking.
4. Enter or establish the 4-digit Parental Locking PIN.
5. Choose which areas you want to control:
 - Rentals
 - Channels
 - US TV Parental Guidelines
 - Movie Ratings
 - Unrated Content
6. Scroll left to save.

GET THE MOST OUT OF YOUR TV

- ✓ Pause live TV
- ✓ Record a whole season of shows
- ✓ Watch TV from mobile devices
- ✓ Control what your kids watch
- ✓ Enjoy instant channel change
- ✓ Rewind to catch what you missed
- ✓ Fast Forward what you want to miss

REMOTE GUIDE



(864) 446-2111 | wctel.com

Abbeville	233 Hwy. 28 Bypass
Iva	619 W. Front St.
McCormick	200 Virginia St.

SETTING UP YOUR REMOTE

1. Turn on TV.
2. Press and release STB button.
3. **a)** For CISCO set top box: Press and hold down A and SETUP until STB light flashes twice.
b) For ARRIS set top box: Press and hold down B and SETUP until STB light flashes twice.

PROGRAMMING REMOTE

For volume control and powering on and off TV.

1. Turn on TV.
2. Press & hold SETUP until LED light blinks twice.
3. Press TV.
4. Press & hold OK.
5. Release button when device turns off.

USING YOUR WHOLE HOME DVR

Record in advance

1. Press GUIDE.
2. Use the ARROW keys to highlight the program you want to record.
3. Press RECORD.

Record while watching

Press RECORD. The recording will start from the moment you hit RECORD.

Record a series

1. Press GUIDE.
2. Use the ARROW keys to highlight the program series you want to record.
3. Press RECORD
 - Once to record a single show – One red dot appears
 - Twice to record the entire series – Three red dots appear
4. Press RECORD three times to cancel recording

VIDEO ON DEMAND

1. Press ON DEMAND.
2. Choose what you want to watch.
3. Press OK to make your selection.
4. Show costs will be added to your bill.

